

Quick-Start Guide


Download LDT-TX1 manual

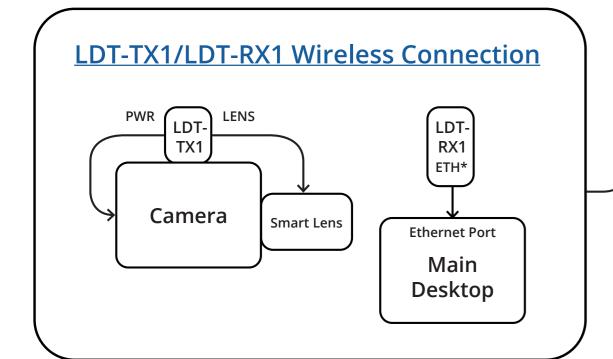

Ensure Antenna is attached to both units for a stable connection

*The LDT-RX1 features POE

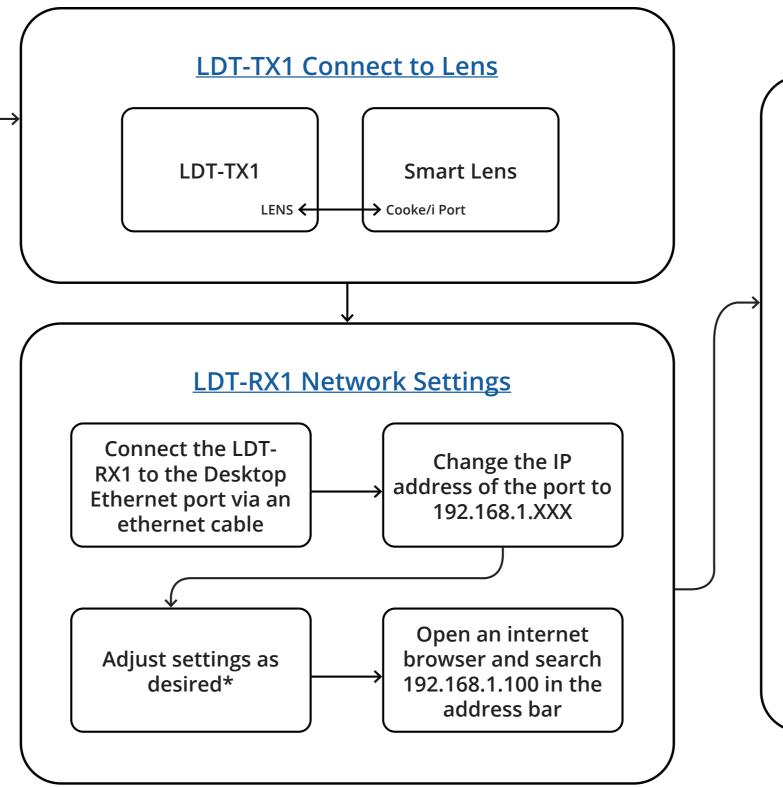

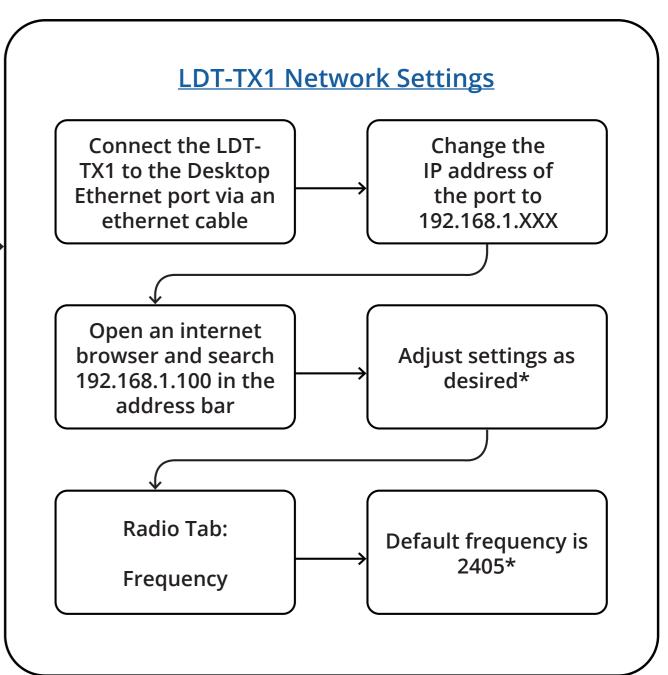

*Ensure both the LDT-TX1 and LDT-RX1 have the same frequency

*Altering the IP address of the either LDT unit will affect the address for accessing their web interface settings