


Notes:
MDR2 is not supported
-
Use MDR3 for lens encoding
-
Make all F-Maps on one handset


[Are Prestons up-to-date?](#)

Yes

No

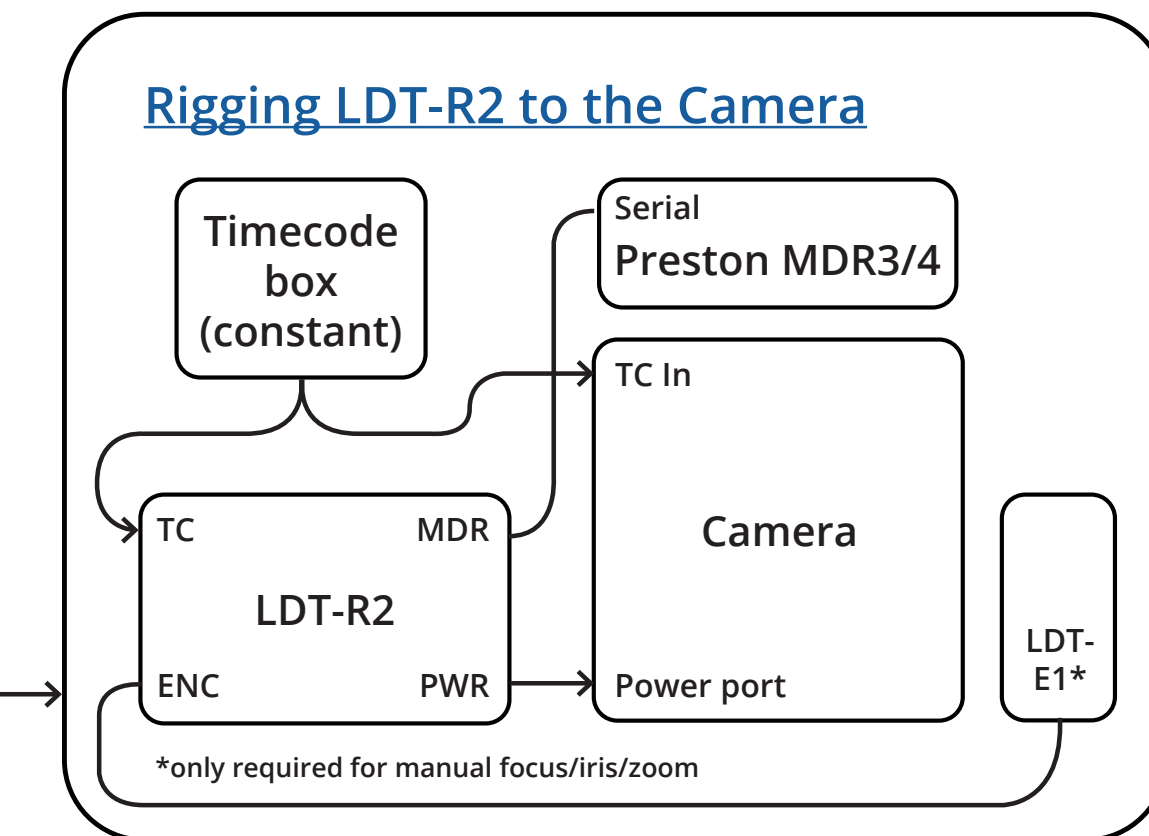


Settings on the LDT-R2 (Each LDT)

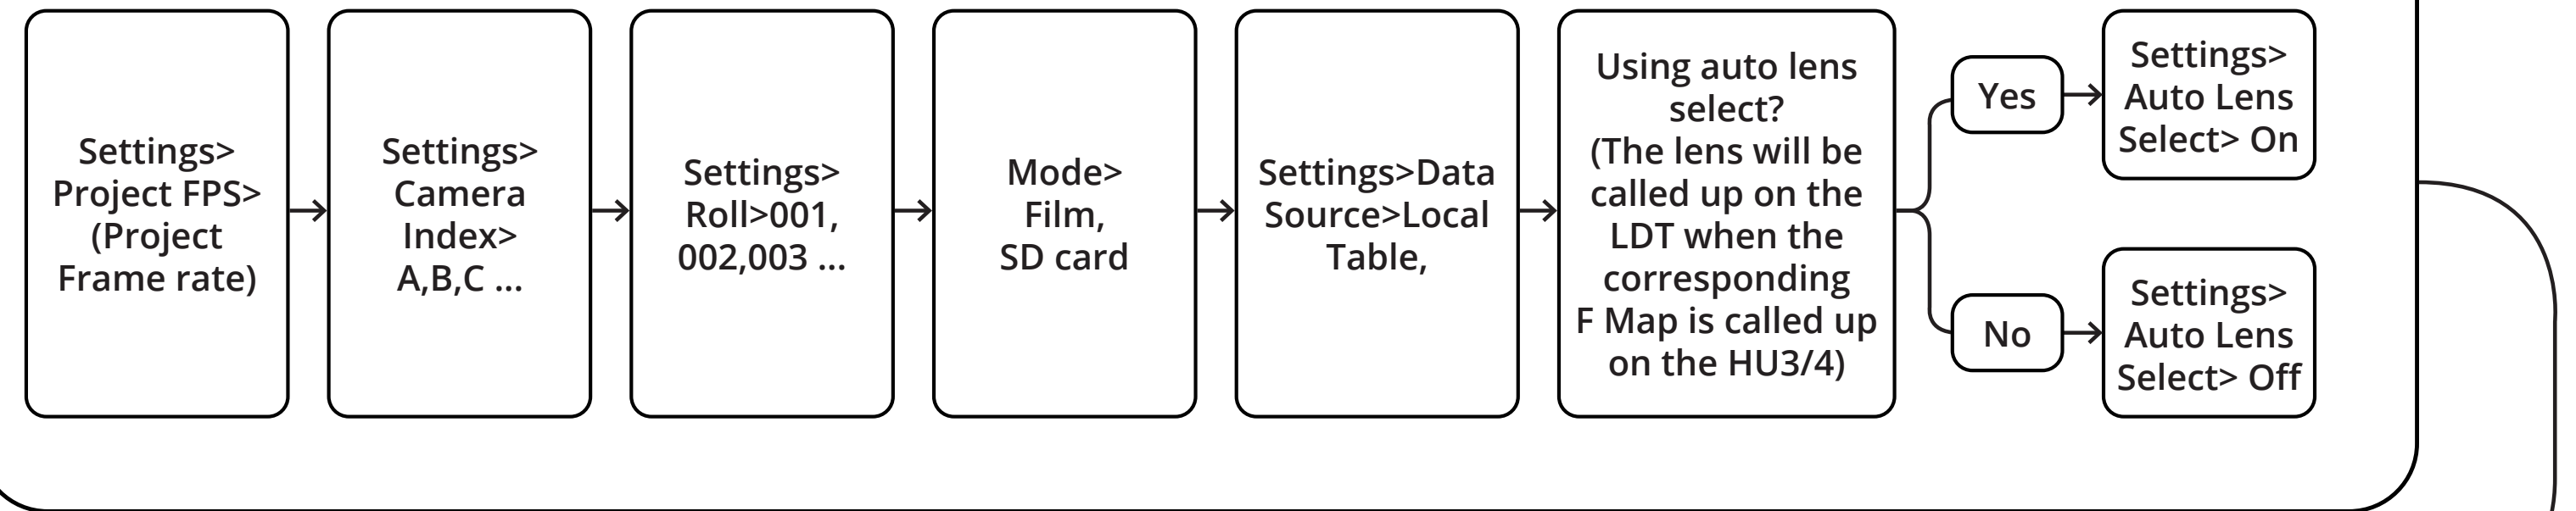


Update HU3/HU4/MDR3/MDR4

NOTE:
F-Maps must be saved in the Other > User folder to enable auto lens select to find them.

Building Lens Tables

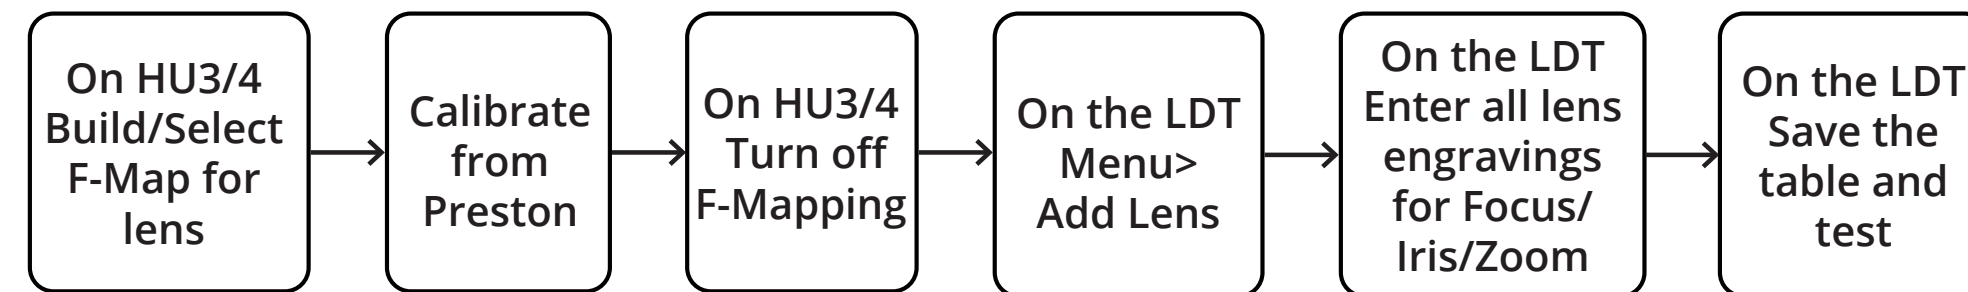

Building Lens Tables

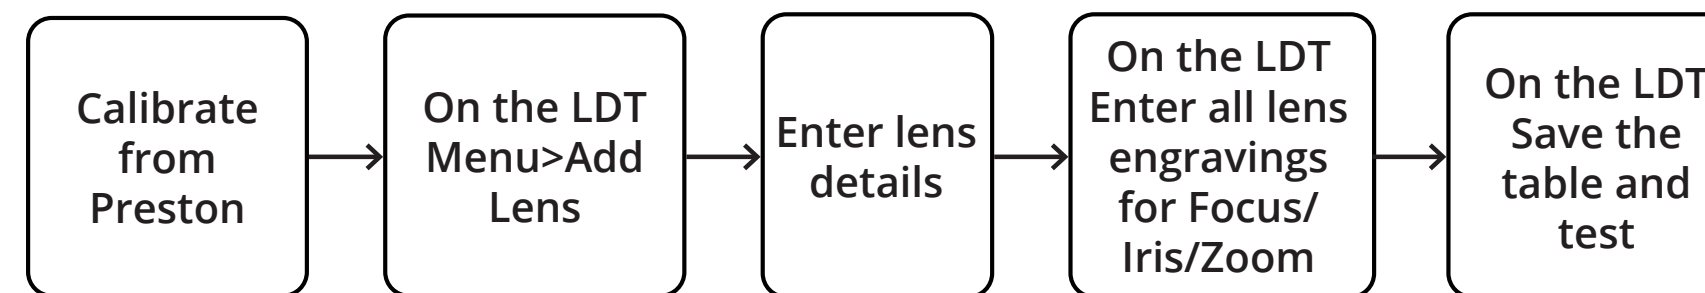

Repeat for all lenses

[When done: Copy lens tables to all LDT-R2s MicroSD Cards \(make a back-up\)](#)

Copy F Maps to all Preston Hand Units

Test each LDT/Camera/ Preston rig by selecting several lenses and checking the LDT read-out matches the lens engravings.

On the Preston: Connect the Iris and zoom control handsets to the MDR

[Using F-Maps on the Preston HU3/HU4?](#)

No

Yes